

Installation Instruction

Product parameters

Power:10W about 860lm

NO Dimmable PF> 0.5

Input:AC230V 50~60Hz

CRI>80 ;

Beam angle 120°Average

Lifetime>50000hrs

CCT:3000K/4000K/6500K

Shape: Circular

Size:Φ230*51mm

Instructions



Warning

1. Please strictly follow the instructions for installation, if not properly installed, easy to cause crashes, electric shock and other accidents.
2. Do not arbitrarily change the lamps and replace their own parts to avoid lamp crashes, electric shock, damage and other accidents.

 

- Do not exceed the scope of all the power supply (rated voltage: 85~265V AC)
- Use for a long time above the rated voltage range, may cause damage to the lamp.
- Do not install on hot Objects
- Do not install directly on the stove, gas, exhaust and other objects, to avoid damage
- Do not use the dimmer in parallel or in series
- Do not use with dimmers, sensors, to avoid failure
- To ensure safety, installation, maintenance, inspection lamps, commissioned by the electrical professionals.
- Non-professionals are prone to danger during construction
- Lamp abnormal phenomenon, please quickly cut off the power, and electrical professionals to check and repair.

Installation diagram




Note: Be sure to cut off the power before installation to prevent electric shock. Please choose the correct installation environment according to the actual protection of the lamp.


Precautions for use: When the power light is not on, please check whether the light source is installed and started properly.

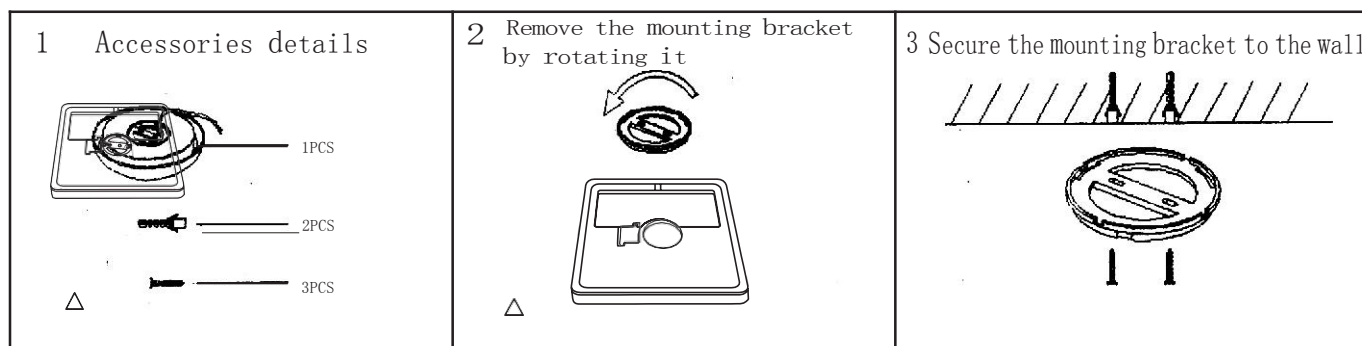

4 Connect the power cord
Please connect the power cord correctly

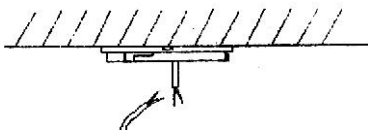

5 Fix the lamp body and the mounting bracket by rotating
! Installation is Complete, Check Whether the fixed firm

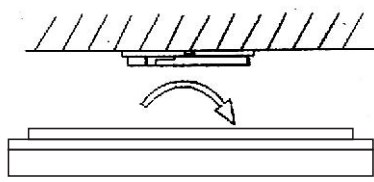

6 Power on and lighting test