


Installation Manual


INPUT: 220-240V, 50/60Hz

ATTENTION: YOU HAVE TO CUT OFF THE POWER BEFORE INSTALLING THE LAMP


hole pattern

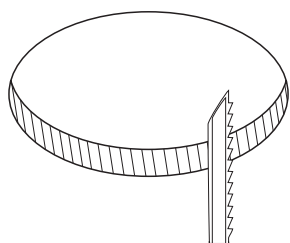


1

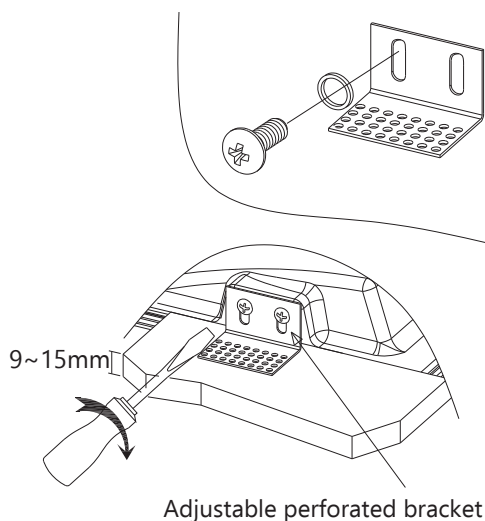


2

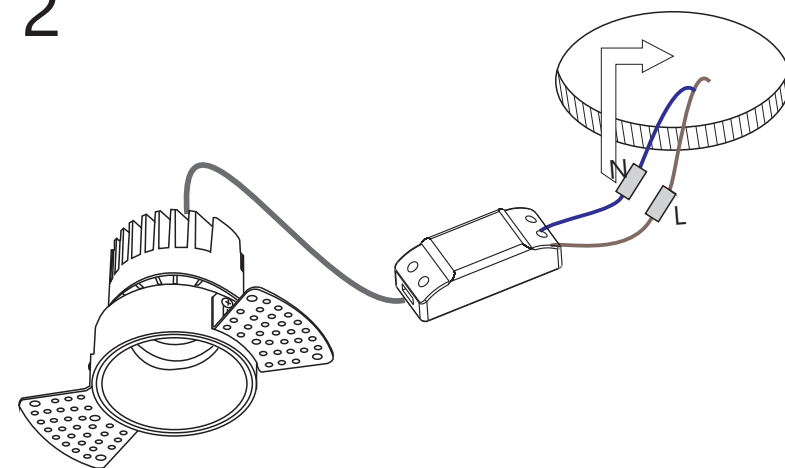

3

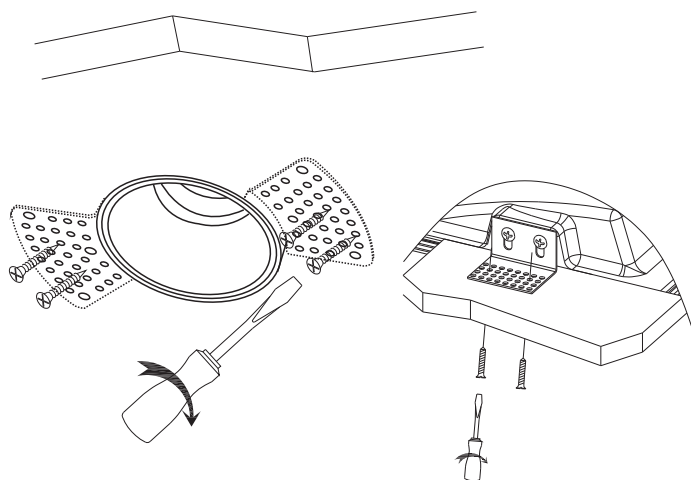

4

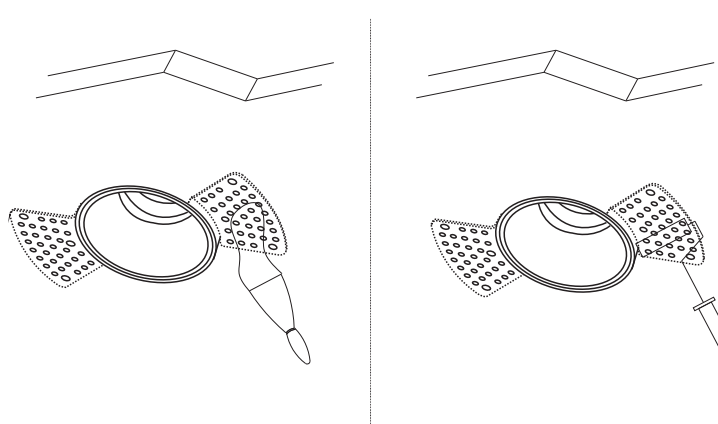

5

